

The aim of this guide is to assist with the installation of Nexans Cabling Solutions Integration strips.  
Integration strips by design can be of differing profiles; therefore this document should only be used for guidance on the general principles of installation.

*Note: It is good working practise to power down all active equipment prior to undertaking any installation work.*

Suggested installation process:


1. With all patch cords removed from the panel/equipment, place the Integration strip into the intended location, to check the correct strip is being used.  
i.e. the gold pads are aligned and are central to the socket connectors.



2. Clean the panel/equipment to ensure the surface is free from oil/grease and other contaminants. Isopropyl Alcohol could be used, however check that this is suitable for the surface to be cleaned.




3. Remove all backing from the adhesive tape.

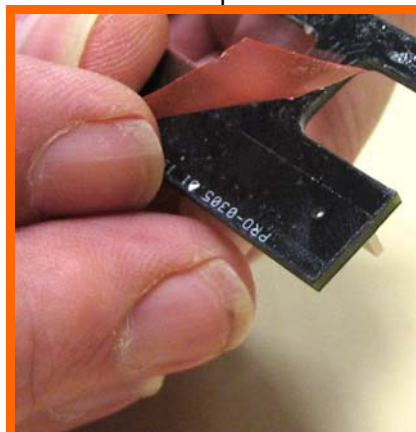

4. Align Integration strip with panel/equipment.

Note: Non-LANsense patch cords can be used to aid alignment if required.

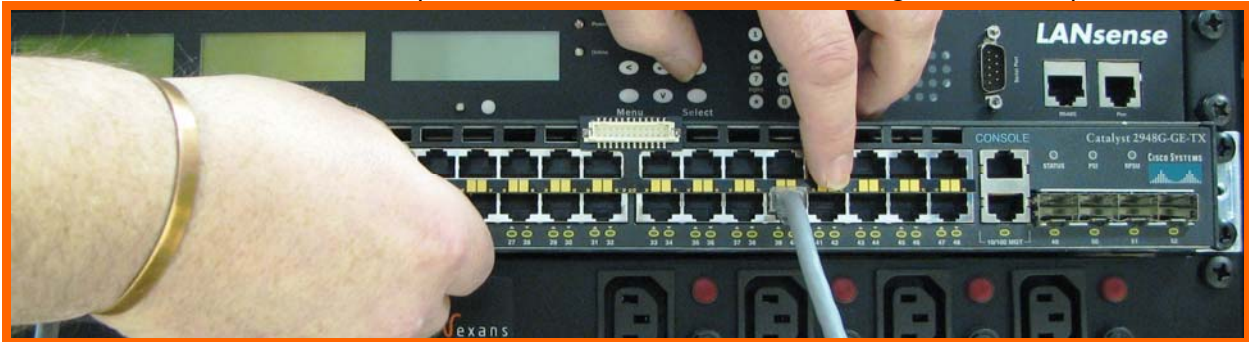

5. Press lightly on the strip to ensure it is adhered to the panel/equipment.

6. Using a LANsense patch cord, check the alignment of the gold pads to the patch cord probe. It is recommended that both ends and several middle pads be checked.



7. Remove patch cords and press firmly on the strip to ensure full adhesion to the panel/equipment.

Note: If required clean gold pads to ensure they are free of any adhesive or contamination.



Example of an installed Integration strip.

